

JT 0065

DATA SHEET

Pile cage spacer are heavy duty wheel spacers designed, and used in foundation works or pile cages. These spacers can be placed onto helical or main bars before the cage is inserted into the pile bore.



PILE CAGE SPACER

Packing Code	Cover (mm)	Steel bar (mm)	Packing (nos)
GPCS75 V	75 mm	8-18	100
GPCS75 O	75 mm	14	100
GPCS100 O	100 mm	14	100