

JT 0067

## DATA SHEET

Roof tile spacers are used for laying slabs on level rooftops and patios. There are used to maintain space between stones and tiles from the surface, this helps to prevent accumulation of water which damages the sealed surface of water proofing, on the surface and roof tops.



ROOF TILE SPACER

Product code	Height	Dia
JRS13	13mm	150mm
JRS19	19mm	150mm